

ZOSKVEE®

P95

Smart Watch

User Manual



All pictures in this manual are only for illustration. The functions and firmware of the product will be updated. Please feel free to contact us via orders if you have any product problems.


English Version

Charging Diagram.....	01
App Installation.....	02
Download App.....	02
Account Registration and Login.....	02
Device Pairing.....	03
Watch Instruction.....	05
Power Key Instruction.....	05
Functions Introductions.....	05
Product Specifications.....	10
Frequently Asked Questions.....	11
Safety Warnings.....	14

◆ Charging Diagram

Please strictly follow the below steps to operate:

- (1) Please charge the watch before use.
The charging process takes about 2 hours.
- (2) Please align the charging cable to the contacts on the back of the watch.
- (3) Please plug it into a USB port on computer, charging base or power bank to charge. (The USB adapter is not included in the package.)

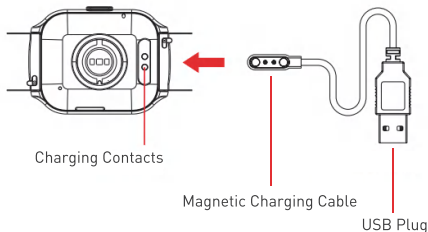

◆ App Installation

1. Download App

Please use the watch with FitCloudPro App. You can download 'FitCloudPro' from App Store or Google Play, or by scanning the QR Code below:



FitCloudPro App is compatible with:



iOS 9.0 and above



Android 9.0 and above



Bluetooth 5.2 and above

Note: It only works with smart phones, not with tablet or personal computers.

2. Account Registration and Login

Register an account with email for the future login.


3. Device Pairing

It is required to turn on the Bluetooth and allow FitCloudPro to access the GPS on your smart phone during the pairing.

Warm Tip: Do not connect the watch directly in Bluetooth list.


Operation Method:

Open the app → 'Device' → click 'Add Peripheral Now' → 'Search Now' to find the watch (P95) in the search list and click 'P95' to complete the pairing.

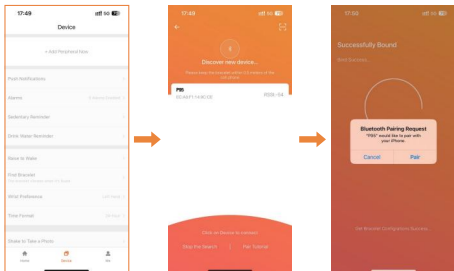



Connected



Not connected

Note:

(1) For Android User, phones must allow the app to obtain permissions and run in the background, otherwise it will affect the user experience.

(2) For iPhone User, the watch supports one-click connection with app with iOS 13 or above smartphones.


Under iOS 13, the watch needs to connect with app firstly, then connect with the P95 in the Bluetooth list to realize the function of Bluetooth call, music play etc.

(3) If the above operations don't work, please restore the watch to factory settings.

Turn on Bluetooth and follow the above steps to connect again.

◆ Watch Instruction

1. Power Key Instruction

	Press	Long press
 Power Key	<ul style="list-style-type: none">(1) Screen on/off(2) Return to Main Interface(3) Pause Workout(4) Function List	<ul style="list-style-type: none">(1) Power on(2) Power off

◆ Functions Introductions



1. Watch Faces:

It can display the current watch time, date, steps and other information.

You can change the watch face by long pressing the main interface and swiping from left to right.



2. Bluetooth Call Function:

Turn on the Call audio. Open the Settings of Phone → 'Bluetooth' → search and find P95 in the Bluetooth list → click 'P95' to bind it. Then you can turn on the Bluetooth Call and music play function.



3. Message Notification:

When the watch is connected to the phone, please allow notification access for FitCloudPro in the phone and turn on 'Call reminder', 'SMS reminder' and 'App reminder' in the app. The watch will display text messages, incoming calls and app notifications such as Facebook, WhatsApp, Twitter, etc. Each notification can be deleted separately.

Note: You cannot reply to text messages on the watch. More operation details can be found at [FAQs 1](#).



4. Heart Rate Monitoring:

Enter the heart rate interface. After the value is stable, you can view the current heart rate status.



5. Blood Pressure Monitoring:

Enter the blood pressure interface. After the value is stable, you can view the current blood pressure status.



6. Blood Oxygen Monitoring:

Enter the blood oxygen interface. After the value is stable, you can view the current blood oxygen status.



7. Sleep Monitoring:

Please wear the watch correctly when you sleep. The watch can automatically detect and record the users' sleep status including deep sleep / light sleep / awake, so that users can intuitively understand their sleep status.



8. Smart Sidebar:

Update the list of functions that users have entered in real-time. Swipe right on the main screen, click the function icon to enter directly to save users' time.



9. Training:

The watch supports 100+ sports modes, such as Outdoor running / Cycling / Mountaineering / Dancing / Yoga / Sit-ups and so on. (For more sports modes, please push the sport in the App)
You can set different exercise goals according to your physical fitness.



10. Music Control:

The phone player should be turned on firstly, then you can control the mobile music player to perform the function of 'next' / 'previous' / 'pause' / 'play' / 'adjust volume' on the watch under connection.



11. Weather Forecast:

The weather forecast function supports current weather viewing.

It will be convenient for you to set reasonable travel arrangements timely. This function can only be used when the watch is connected to the App. At the same time, the phone's GPS is on and the App is allowed to access the phone's location.



12. Quick Setting:

Swipe down the main screen to enter into the quick settings bar, including 'Do not disturb', 'Brightness adjustment', 'Theme', 'Settings', 'Music Control', 'Bluetooth Call' and 'Find Phone'.

13. More Functions:

The watch has other functions such as voice control, breathing training, alarm clock, timer, stopwatch, raising hand to activate display, vibration adjustment, brightness adjustment, sedentary reminder, remote camera, finding device, finding phones, physiological cycle reminder, resetting, shutdown, and viewing watch information.

Note:

1. More detailed information analysis and data recording can be viewed in the App.
2. The measurement results are only for the fitness reference and cannot be used as a medical purpose.

◆ Product Specifications

Model:	P95	Screen Size:	2 inches
Battery Capacity:	270mAh	Charging Voltage:	5V
Charging Time:	About 2 hours	Bluetooth Version:	5.2
Operating Temperature:	-10℃ -45℃	Watch Size:	H: 260mm W: 42mm D: 10mm
Resolution:	240*296	Screen Type:	TFT
Strap Width:	22mm		
Usage Time:	About 5-7 days		
Standby Time:	About 15-20 days		

◆FAQs

1. How to receive the messages on the watch?

(1) If you have allowed all permissions when installing the app, please open the app FitCloudPro - Device - App Reminder - Turn on the app you want to receive notifications. You will receive message notifications at last.

(2) If you did not allow all usage permissions when installing the app, please uninstall and reinstall the app, and allow all usage permissions, click Device - App Reminder - Turn on the app you want to receive notifications, and you will receive message notifications.

Note:

- a. The watch needs to be connected to the app and Bluetooth of your mobile phone.
- b. The watch only receives message displayed in the mobile phone message notification bar.
- c. Keep the watch and mobile phone within 5 meters.

2. What should I do if the watch always disconnect to the app or Bluetooth of the mobile phone?

- a. Make sure there is no obstruction between the

device and the phone. Metal jewelry worn can also interfere with Bluetooth connection stability.

b. Too many devices are connected in the Bluetooth of your smartphone, please ignore several devices.

c. Please allow APP to run in the background.

d. Bluetooth connection is affected by distance, please keep the distance between the watch and cell phone within 5 meters.

3. What should I do if the sleep function doesn't work?

(1) It may be that your wrist moves more during sleep, and the sensor judges that it is not sleep, resulting in no sleep information being recorded.

It is recommended that you wear the watch on your non-dominant hand while you sleep. (For example, if you are right-handed, please wear the watch on your left hand)

(2) The sleep function only records sleep data at night.

(3) When wearing the device, make sure that the front of the device is facing up. Wear it on the back of the wrist bone while making sure the watch is close to the skin. Avoid wearing it too loose or too tight, which may cause sleep data inaccurate.

4. Why is the device still unresponsive after charging for some time?

When the device is not used for a long time, it will enter a low battery state, please charge it for about half an hour to activate it.

Note: It is better to charge it with a USB plug.

The current is too small on the computer or tablet, it may be difficult to activate the watch when the battery is low.

5. What should I do if the measurements of blood oxygen, blood pressure and heart rate are inaccurate?

(1) Incorrect wearing posture will affect the measurement of heart rate, such as the deviation of the green light detector when the watch is not close to the skin.

(2) Swing of the arm and dislocation of the watch on the skin. Wearing the watch too tightly, raising your hand or make a fist will affect blood circulation, it may also affect the heart rate.

(3) The correct measurement method is to lay the arm flat, relax and keep still, while making sure the watch is close to the skin. NOTE: Even when worn correctly, individual differences such as skin tone,

hair, tattoos, and scars can affect the heart rate.
(4) The watch is not intended for medical use, all measurements are for general fitness purposes.

◆ Safety Warnings

1. The item is not a toy - do not allow children or pets to play with the product. Always store product out of the reach of children. It may cause chock, if some small parts are swallowed.
2. The measurement data of this device in heart rate monitor and blood oxygen monitor is only intended for general fitness and wellness purpose. The measurement data is not for the medical purposes. We cannot take the measurement data as a reference to cure or prevent disease.

Tip: For detailed operating instructions, please refer to the E-user manual.



Made in China